
Profile/Bar packaging requirements

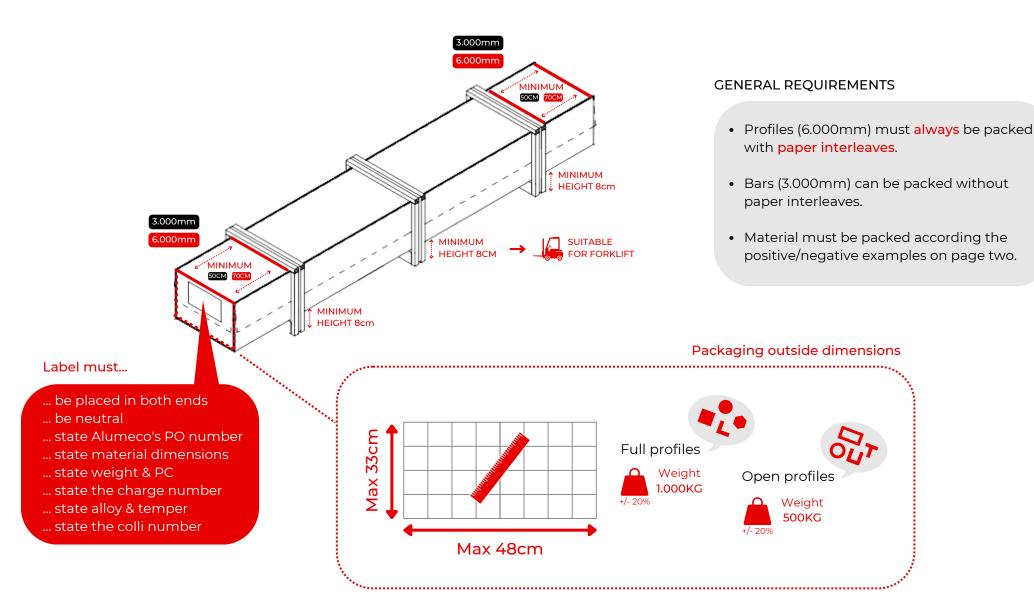



Good & less good examples



Flat bars should be packed in different direction to increase stiffness, when lifted. Material always to be paper interleaved.





Packaging should be all around material.





A top layer must protect the top of the material.



Wood must not be placed closer than 50cm (3.000) and 70cm (6.000) from the edge of the colli.

